

## Purpose: How to configure the NSE to use the Failover feature.


The Failover feature allows two Nomadix Gateways to act as siblings, where one device will take up the users should the other device become disconnected from the network. As part of this functionality, the settings (except IP addresses) between the two devices will be synchronized automatically.

## **Primary Unit**

Login to the Nomadix Gateway, System/Fail Over Check the radio button "Primary" in Sibling Status.

In Sibling IP address field type the IP address of the NSE that will be taking up the users should this "Primary" fail.

Note: gateways have to be of one and the same family and running the same firmware release.

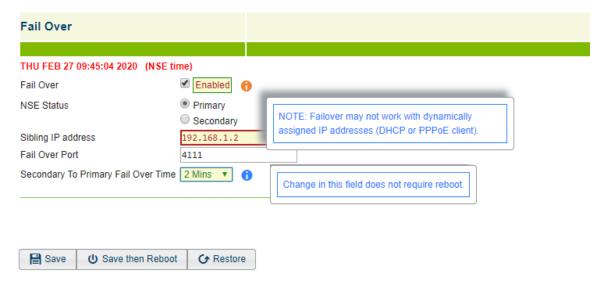

You may configure the failover time between 2-10 minutes.

Select Save then Reboot to set the unit as primary when it reboots.



## Configure the secondary unit.

Login to the Nomadix Gateway, System/Fail-Over Check the radio button "Secondary" in Sibling Status.

In Sibling IP address field type the IP address of the Primary unit.



Select Save then Reboot to set the unit as secondary when it reboots.