




**Purpose: To configure the Local Web Server to use the Access Codes Portal Template.**


This document will instruct you how to configure the Local Web Server pages to use the Access Code Portal Template.

**Note:** Please download the accesscode.zip file and unzip the contents before proceeding.

**1. FTP the Portal Files to the AG. Log into the AG using FTP**

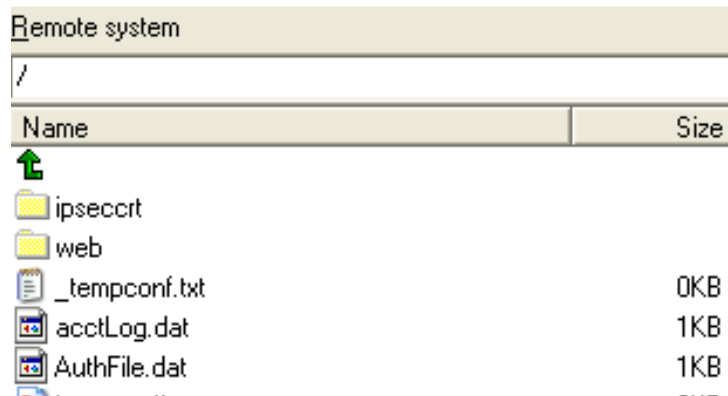

Change to the web directory and upload the access-code-login.htm file here. Also, in the web directory create two directories: css and images.

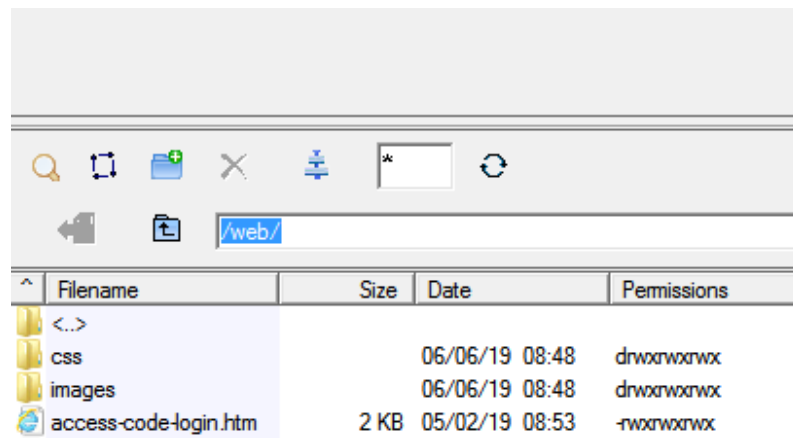



FTP the access-code-login.css to the web\css directory and the all the below files to the web\images directory:

- favicon.ico
- logo-nomadix.png
- panel-header.png
- powered-by-nomadix.png
- radial-gradation.png
- shad-horizontal.png

2. **Configure the Local Web Server settings.** Login to the Nomadix Web Management Interface (WMI) and add the Local Web Server pages to the configuration (Subscriber Interface->Local Web Server).  
Add each page and image under the appropriate section as per below:

Local Web Server Setup	
<b>Notes:</b> 1. Limit the total size of Web Pages and Images to 200 KB. 2. The Pre-Authentication Pages and Images are available at <a href="http://nseip.1111/web/&lt;filename&gt;">http://nseip.1111/web/&lt;filename&gt;</a> or at <a href="https://nseip.1112/web/&lt;filename&gt;">https://nseip.1112/web/&lt;filename&gt;</a> 3. The Post-Authentication Pages and Images are available at <a href="http://nseip.3111/web/&lt;filename&gt;">http://nseip.3111/web/&lt;filename&gt;</a>	
Web Page File Name:	<input type="text" value="access-code-login.htm"/> + Add Remove
Web Page File Name:	<input type="text" value="css/access-code-login.css"/> + Add Remove
Image File Name:	<input type="text" value="images/favicon.ico"/> + Add Remove
Image File Name:	<input type="text" value="images/logo-nomadix.png"/> + Add Remove
Image File Name:	<input type="text" value="images/panel-header.png"/> + Add Remove
Image File Name:	<input type="text" value="images/powered-by-nomadix.png"/> + Add Remove
Image File Name:	<input type="text" value="images/radial-gradation.png"/> + Add Remove
Image File Name:	<input type="text" value="images/shad-horizontal.png"/> + Add Remove

Click on the Reread Files button after all pages and images added



- 3. Configure the Portal Page.** Under Configuration->AAA, Enable AAA, then select the Internal Web Server tab Enable Usernames and Enable Portal Page with Portal Page URL pointing to the Access Code Portal Template

<http://login.nomadix.com:1111/web/access-code-login.htm>

**Authentication Authorization and Accounting Settings**

AAA Services  Enable

Options Internal Web Server External Web Server

SSL Support  Enabled ⓘ

Encrypt only Sensitive Data  Enabled

Certificate DNS Name

Enable

Portal Page

Portal Page URL  ⚠ Caution

Parameter Passing  Enabled

Parameter Signing:

Method  None  HASH-CRC32  HMAC-MD5

Parameters  UI  MA  RN  PORT  SIP  QINQ

Set Shared Secret  (write-only)

Manual Passthrough Address  Enabled

Supports GIS Clients  Yes

Block IWS Login Page  Yes

Click on the Save button to apply the changes.




4. **Create Access Code** Go to Subscriber Administration/Access codes to create a code.

Select Edit Plans to create a new plan and enter in the parameters you want for the plan. Click Add to create.

You will need to click on Create & Print to generate the code/codes to be used.



- 5. User Experience** When the subscriber launches their browser, they will be presented with the following web page. Here they will enter in their Access Code and select Login to gain access.

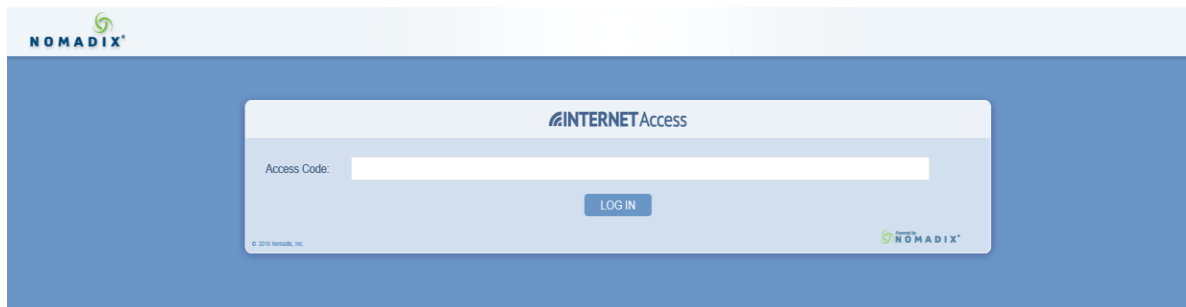

### **How to customize the portal page.**

The easiest way to replace the images is to create new ones, with the same name and overwrite them in the images directory